


CRACK LESS THAN
1/16" WIDE

CRACK GREATER THAN
1/16" WIDE

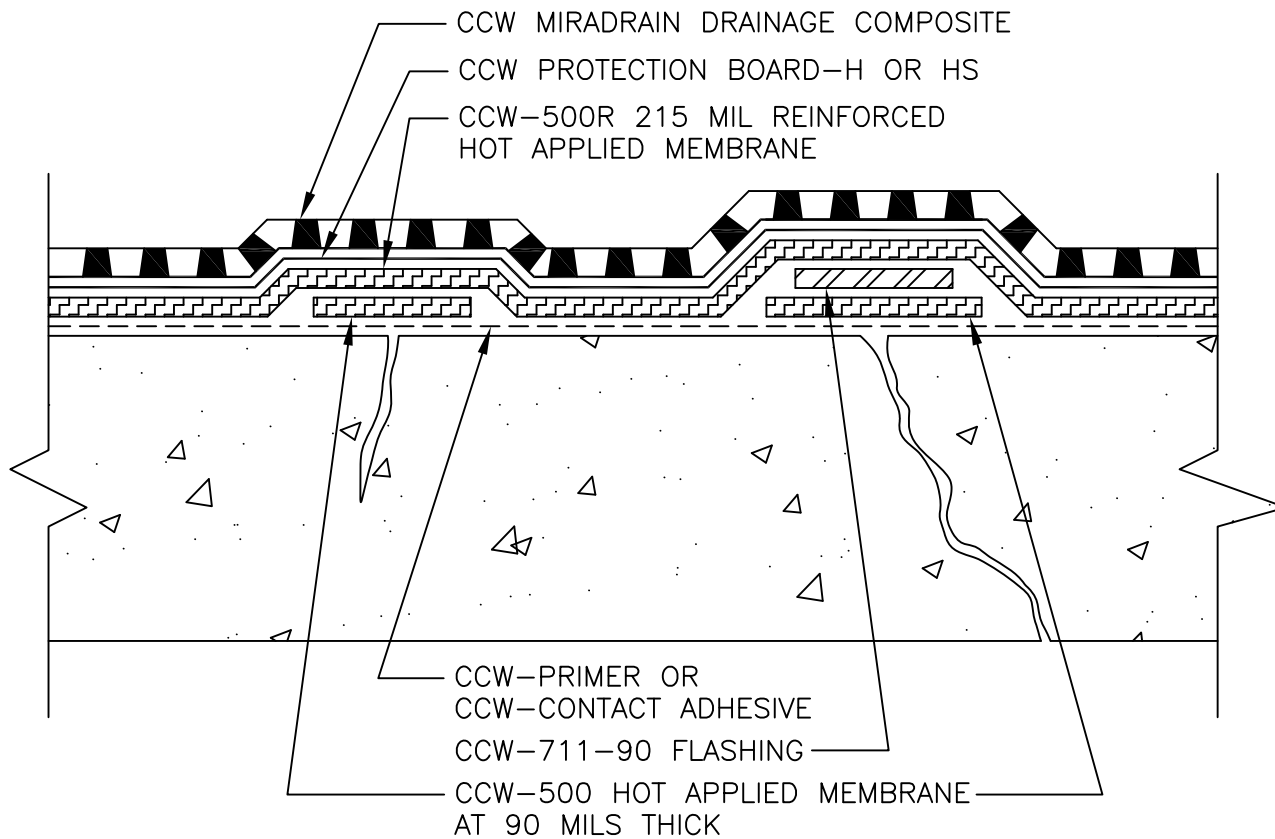

NOTES

- 1) APPLY CCW-PRIMER OR CCW-CONTACT ADHESIVE 8" WIDE OVER CRACKS LESS THAN 1/16", 16" WIDE OVER LARGER CRACKS.
- 2) APPLY CCW-500 HOT APPLIED MEMBRANE 6" WIDE, OVER HAIRLINE CRACKS & COLD JOINTS
- 3) APPLY CCW-500 HOT APPLIED MEMBRANE 16" WIDE, OVER LARGER CRACKS & COLD JOINTS AND INSTALL A 12" WIDE STRIP OF CCW-711-90 FLASHING.
- 4) APPLY CCW-500R HOT APPLIED MEMBRANE OVER ENTIRE AREA, INCLUDING OVER FLASHING.
- 5) INSTALL CCW PROTECTION BOARD H OR HS
- 6) INSTALL CCW MIRADRAIN DRAINAGE COMPOSITE

500-1

CRACK TREATMENT

CARLISLE

© 2011 CARLISLE CORPORATION