


INSIDE CORNER REINFORCING

OUTSIDE CORNER REINFORCING


STEP ONE

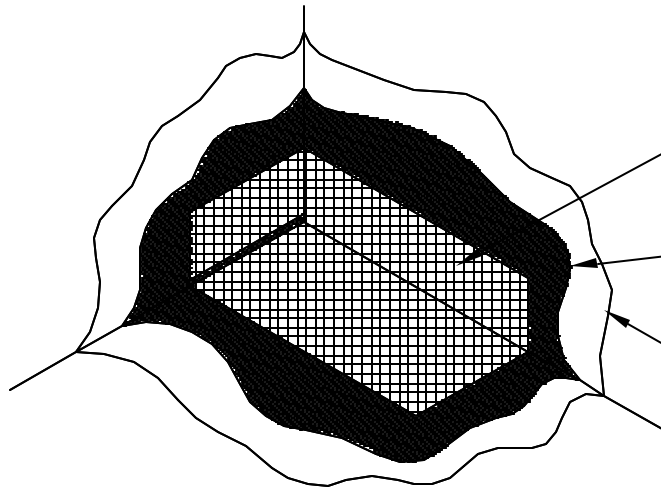


CCW 500 REINFORCING MATERIAL - FIRST LAYER

CCW 500 - FIRST COAT - 90 MILS

CCW 550 PRIMER

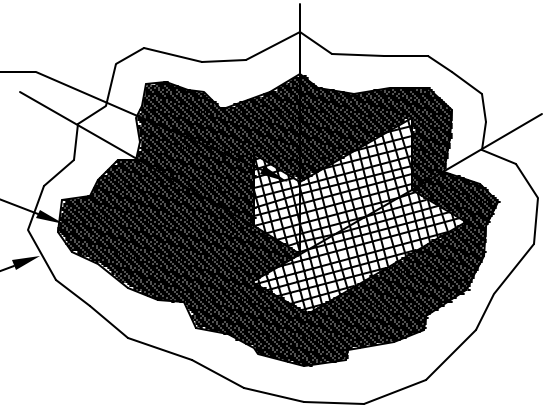


STEP TWO

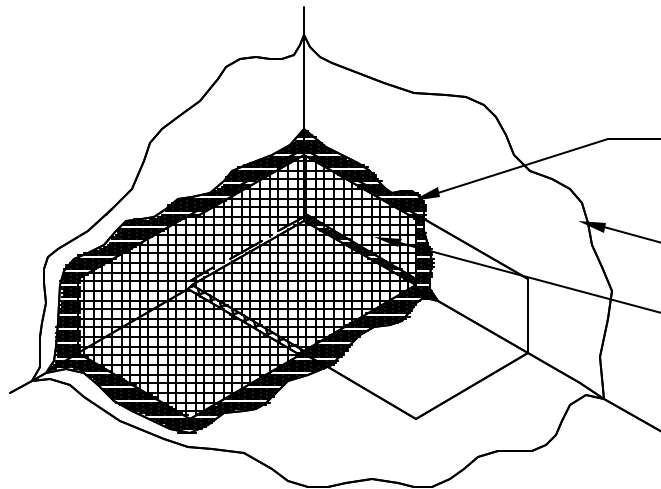

CCW 500 - SECOND COAT - 125 MILS

CCW 550 PRIMER

CCW 500 REINFORCING MATERIAL - SECOND LAYER

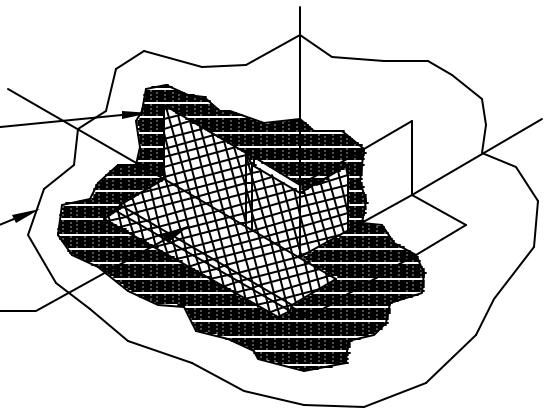

NOTE:

FOR REINFORCING MATERIAL USE EITHER
CCW- 500 REINFORCING FABRIC,
CCW- 711- 90 OR
CCW- UNCURED NEOPRENE FLASHING

STEP THREE

APPLY A TOP COAT OF CCW 500 COMPLETELY COVERING ALL EXPOSED REINFORCING MATERIAL.

500-15A

CORNER REINFORCEMENT



© 2005 CARLISLE CORPORATION