


OUTSIDE CORNER REINFORCING

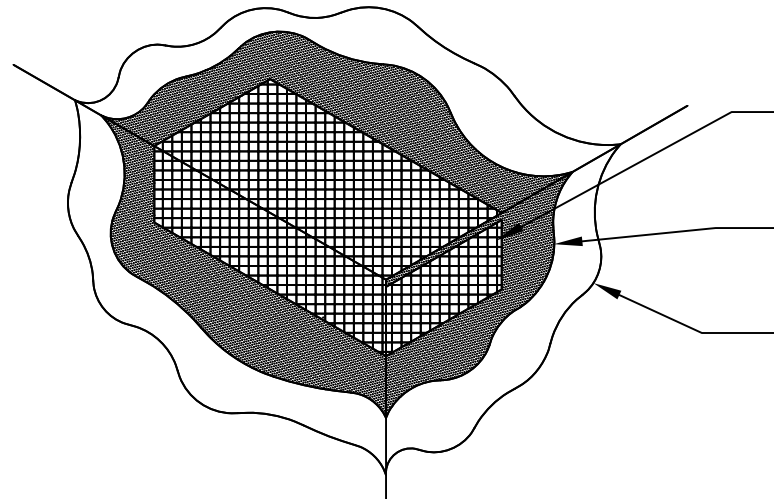


STEP ONE

CCW-500 REINFORCING MATERIAL - FIRST LAYER

CCW-500 - FIRST COAT - 90 MILS

CCW-PRIMER OR CCW-CONTACT ADHESIVE

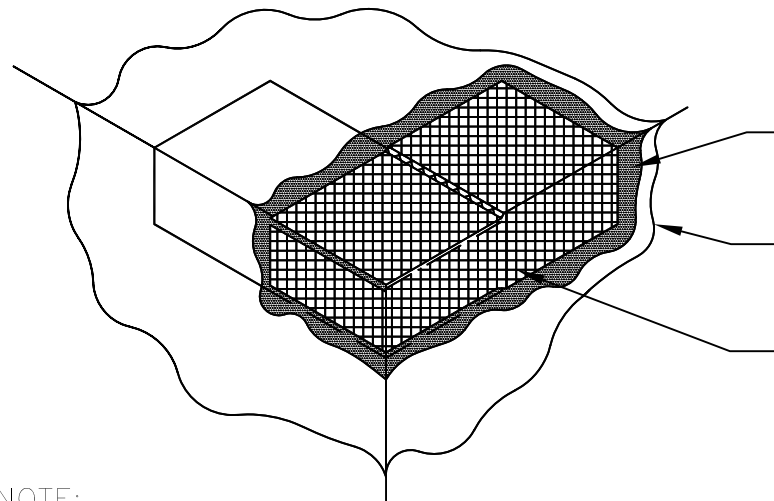

STEP TWO

CCW-500 - SECOND COAT - 125 MILS

CCW-PRIMER OR CCW-CONTACT ADHESIVE

CCW-500 REINFORCING MATERIAL - SECOND LAYER

NOTE:

FOR REINFORCING MATERIAL USE EITHER CCW-500 REINFORCING FABRIC, CCW-711-90 OR CCW-UNCURED NEOPRENE FLASHING

STEP THREE

APPLY A TOP COAT OF CCW-500 COMPLETELY COVERING ALL EXPOSED REINFORCING MATERIAL.

500-15B

CORNER REINFORCEMENT

CARLISLE

© 2011 CARLISLE CORPORATION