


SURE-SEAL  
IN-SEAM SEALANT

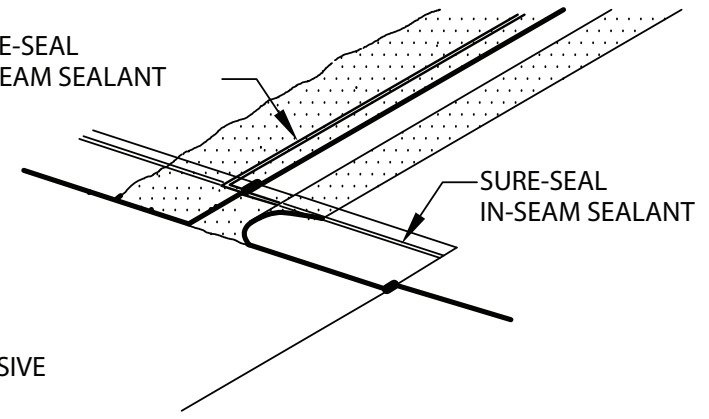

NOTES:

1. MEMBRANE SPLICE PROCEDURE IS FOR SPLICES BETWEEN CURED MEMBRANES.
2. APPLY SPLICING CEMENT OVER ENTIRE 6" MINIMUM SPLICE AREA PRIOR TO APPLICATION OF IN-SEAM SEALANT.
3. IN-SEAM SEALANT SHALL BE CONTINUOUS ALONG THE LENGTH OF THE SPLICE.
4. MAINTAIN A CONTINUOUS BEAD OF IN-SEAM SEALANT AT ALL MEMBRANE SPLICES; ESPECIALLY AT SPLICE INTERSECTIONS.

B-1A

MEMBRANE SPLICE

**CARLISLE**

©1996 CARLISLE CORPORATION