

CCW PROTECTION BOARD OR
CCW MIRADRAIN DRAINAGE COMPOSITE

SURE-SEAL® MEMBRANE
.060 INCH THICK MIN.

SURE-SEAL BONDING
ADHESIVE

SURE-SEAL
IN-SEAM SEALANT

SURE-SEAL SPLICING CEMENT

SURE-SEAL LAP SEALANT


MINIMUM 4 INCH DIAMETER
DRAINAGE PIPE (BY OTHERS)

SEE NOTE 3

MUD SLAB OR COMPACTED SAND BED

NOTES:

1. HP PROTECTIVE MAT MUST BE UTILIZED BENEATH THE MEMBRANE WHEN INSTALLING OVER A COMPACTED SAND BED.
2. EXTEND THE MEMBRANE 2 FEET MINIMUM BEYOND THE FOOTING AND ENSURE ADEQUATE PROTECTION FROM FORM WORK.
3. SPLICE ONE QUARTER SECTION OF MINIMUM 12 INCHES X 12 INCHES ELASTOFORM® FLASHING BENEATH THE MEMBRANE AT THE CORNER PRIOR TO POURING CONCRETE SO PROPER CORNER FLASHING CAN BE COMPLETED AFTER CONCRETE FORMS ARE REMOVED.

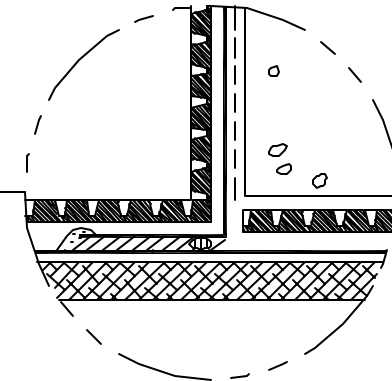

RECOMMENDED METHOD

B-7B

FOUNDATION/SLAB TIE-IN

CARLISLE

© 1996 CARLISLE CORPORATION