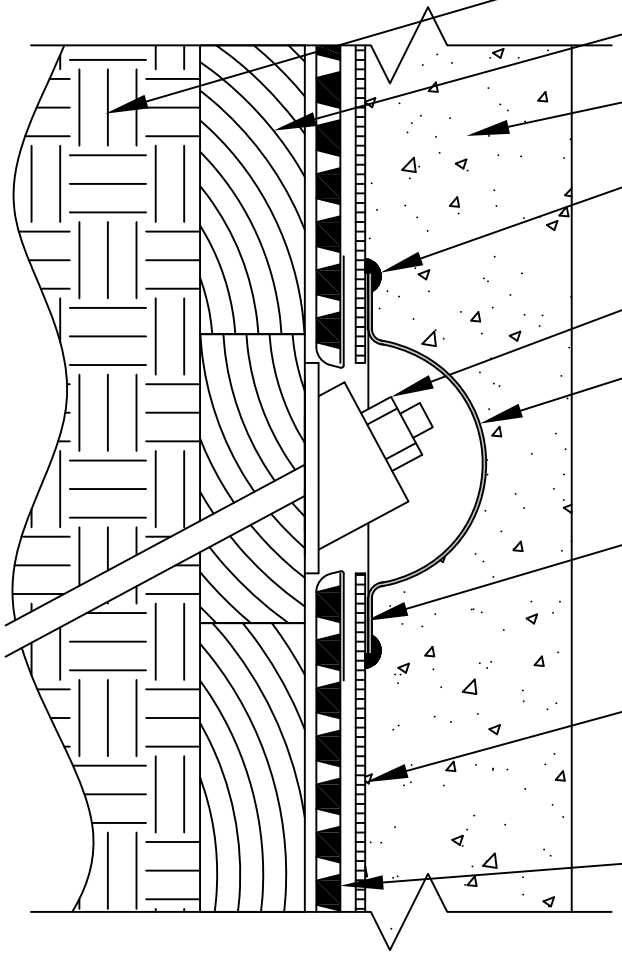

EARTH

LAGGING

CONCRETE WALL

UNIVERSAL LAP SEALANT – APPLY A 1" X 1/4" BEAD TO ALL 4 EDGES OF THE CCW TIE–BACK COVER

TIE–BACK

CCW TIE–BACK COVER – REMOVE RELEASE LINER BEFORE INSTALLATION – PRESS OR ROLL FLANGE TO MAKE SURE THERE IS 100% ADHESION

INSTALL MIRAPLY–V & MIRADRAIN SECURELY TO LAGGING AND TIGHT AROUND TIE–BACK PROVIDING A FLAT SURFACE FOR THE CCW–TIE–BACK COVER INSTALLATION

MIRAPLY–V WITH ADHESIVE SIDE FACING OUT/CONCRETE – REMOVE RELEASE LINER BEFORE CCW TIE–BACK COVER INSTALLATION

CCW MIRADRAIN DRAINAGE COMPOSITE WITH FABRIC SIDE TOWARD LAGGING

MP–14A	TIE–BACK COVER DETAIL	CARLISLE

© 2011 CARLISLE CORPORATION